


STEP 2 - GROUT OPENINGS AT BEND AT EACH LAYER. PREVENT MOVEMENT UNTIL GROUT IS SOLID.

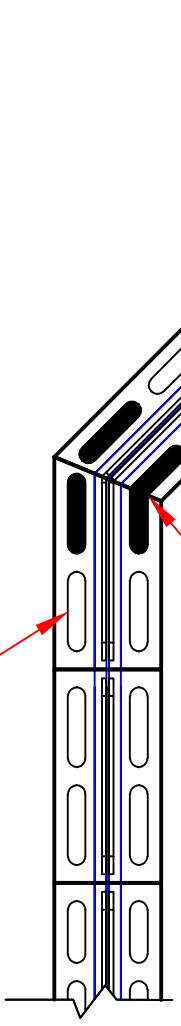

STEP 3 - FILL BALANCE OF OPENINGS AT EACH LAYER AS DIRECTED IN SITE SPECIFIC DESIGN.



This graphic represents a preliminary, non site-specific design. If used for construction, a registered professional engineer must be retained to review & approve the design, confirm site conditions, and inspect construction.

Nueva 150 Wall System
45-Degree Corner in Freestanding Wall Details