



90-DEGREE CORNERS:

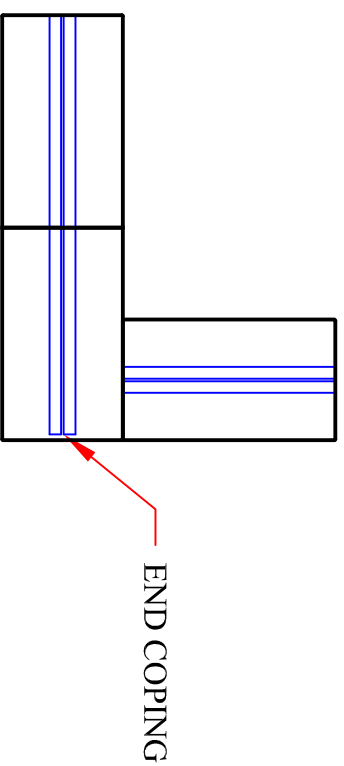

ELEVATION CHANGES:

20" CORNER/END UNIT AT
EXPOSED ENDS

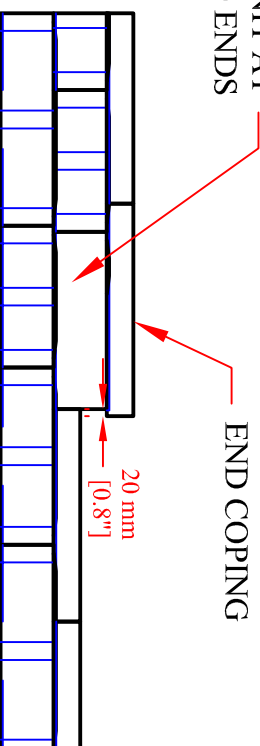

FOR STEPPED WALLS, ALWAYS START THE
COPING FROM THE LOWEST ELEVATION.

GENERAL NOTES: LAY OUT COPING PRIOR TO USING ADHESIVE. USE EXTERIOR-GRADE
CONSTRUCTION ADHESIVE TO SECURE COPING. COPING UNITS ARE
SUPPLIED WITH A RECESS TO THE BOTTOM OF THE UNIT TO
ACCOMMODATE THE LOCATOR AT THE TOP OF THE STANDARD WALL
UNITS; THE COPING SHOULD ALWAYS BE INSTALLED WITH THE RECESS
FACING DOWNWARD.



This graphic represents a preliminary, non site-specific design. If used for construction, a registered professional engineer must be retained to review & approve the design, confirm site conditions, and inspect construction.

Nueva 150 Wall System
Coping Details