



90-DEGREE CORNERS:

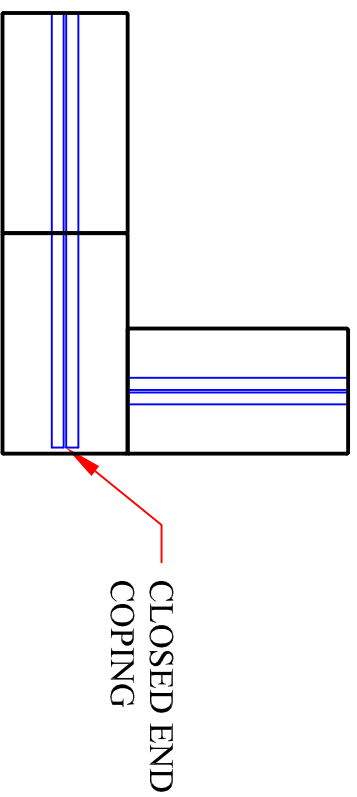

ELEVATION CHANGES:

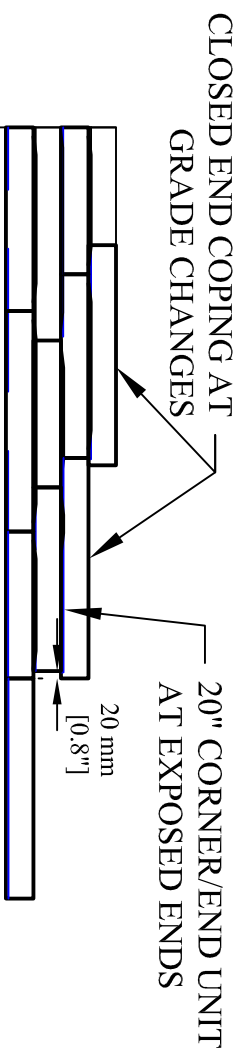

FOR STEPPED WALLS, ALWAYS START THE COPING FROM THE LOWEST ELEVATION.

GENERAL NOTES: LAY OUT COPING PRIOR TO USING ADHESIVE. USE EXTERIOR-GRADE CONSTRUCTION ADHESIVE TO SECURE COPING. COPING UNITS ARE SUPPLIED WITH A RECESS TO THE BOTTOM OF THE UNIT TO ACCOMMODATE THE LOCATOR AT THE TOP OF THE STANDARD WALL UNITS; THE COPING SHOULD ALWAYS BE INSTALLED WITH THE RECESS FACING DOWNWARD.



This graphic represents a preliminary, non site-specific design. If used for construction, a registered professional engineer must be retained to review & approve the design, confirm site conditions, and inspect construction.

Nueva 75 Wall System
Coping Details