
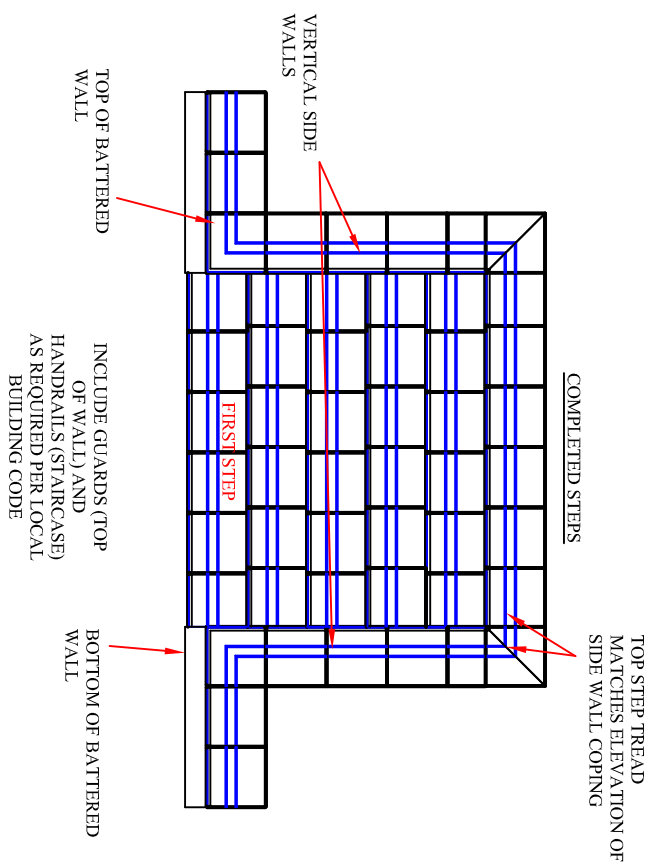
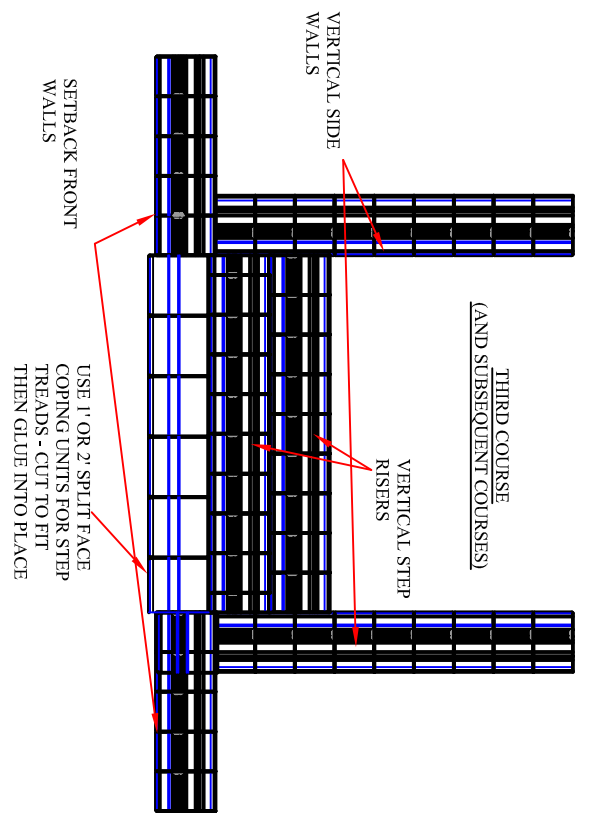
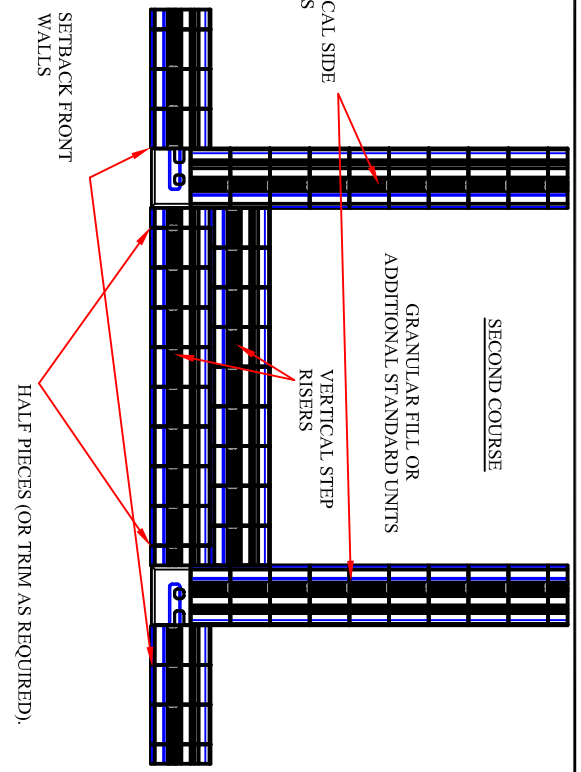


FOR SIDE WALLS (BOTH SIDES) AND TREAD RISERS, KNOCK THE BACK PORTION OF THE INTERLOCK KNOB OFF USING A COLD CHISEL TO ALLOW FOR VERTICAL ALIGNMENT.

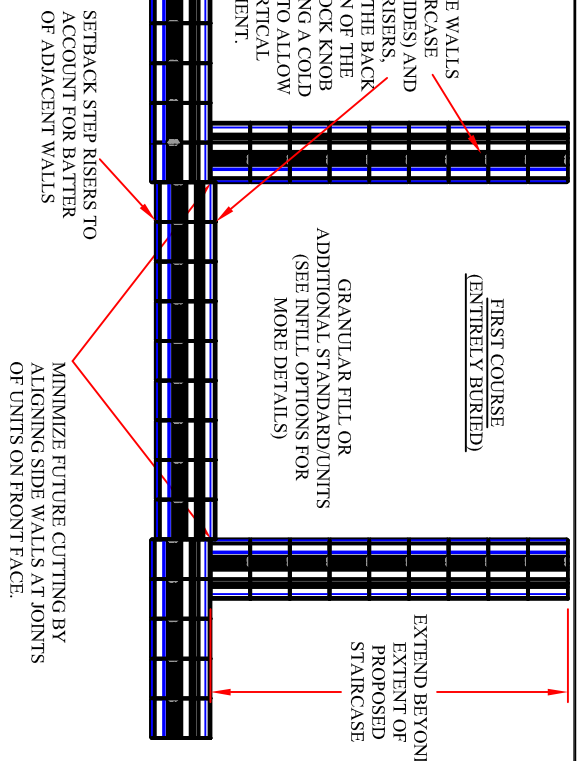

This graphic represents a preliminary, non site-specific design. If used for construction, a registered professional engineer must be retained to review & approve the design, confirm site conditions, and inspect construction.

## Ortana Retaining Wall System Staircase Construction (Inset)