


STEP 1

FOR VERTICAL WALLS, KNOCK THE BACK KNOB OFF USING A COLD CHISEL.



STEP 2


THEN SPLIT UNIT AT GROOVE TO EXPOSE REAR ROCK FACE.

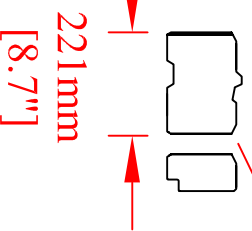

COPING UNIT (CENTRE SO

OVERHANG IS 40mm ON FRONT OR BACK)

STANDARD UNITS (USE ADHESIVE BETWEEN ALL LAYERS AND STAGGER UNITS)

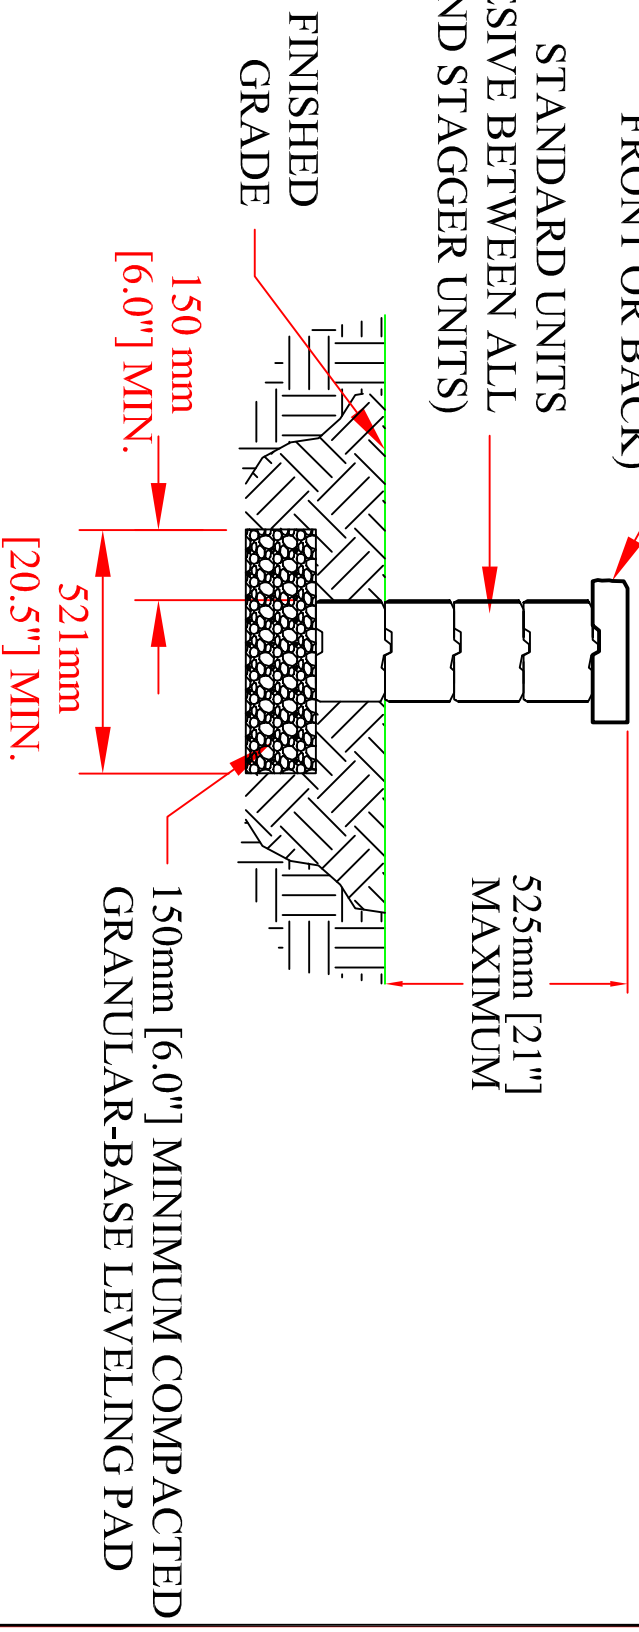

This graphic represents a preliminary, non site-specific design. If used for construction, a registered professional engineer must be retained to review & approve the design, confirm site conditions, and inspect construction.

Ortana Retaining Wall System
Typical Freestanding Wall